



01-007/01-008

# REAR FLIP SEAT

WILL FIT E-Z-GO® TXT® AND FREEDOM TXT®

## INSTALLATION INSTRUCTIONS

### INCLUDED:



Seat Frame



Lean Back Cushion



Seat Bottom Cushion



2 Footrest Brackets




2 Brackets



2 Seat Back Brackets



2 Bagwell Brackets

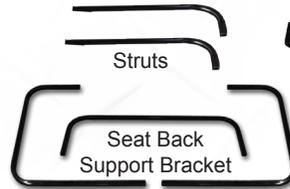

Struts

Seat Back Support Bracket

2 Armrests




HD Bracket



Footrest

# 1


Remove strut and basket assembly. Remove hardware from struts and detach canopy. Use a brace to support the canopy. Retain hardware.

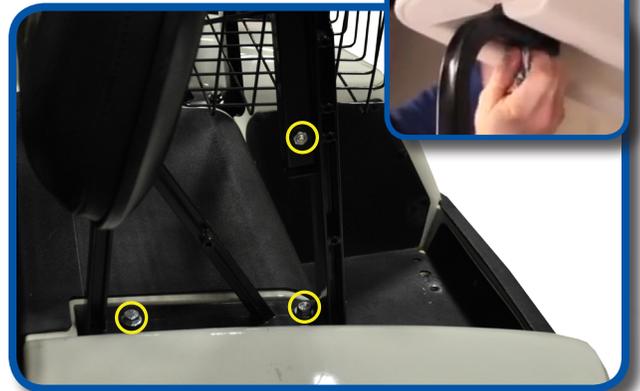


Install main brackets using hardware from Pack 1. Position the brackets as shown. Tighten hardware.

# 2

Mount the Bagwell brackets to the **OUTER** holes using hardware Pack 2.

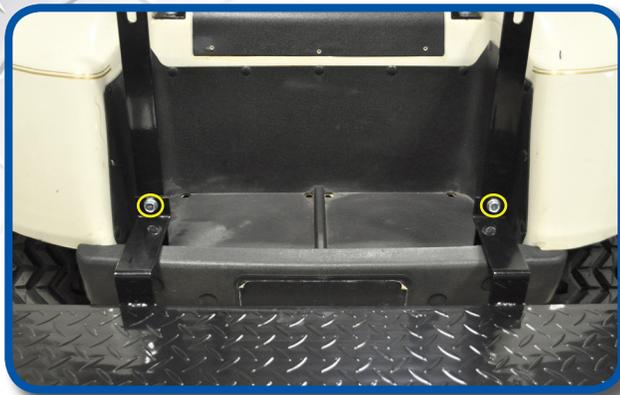

Attach footrest as shown using remaining hardware from Pack 3.

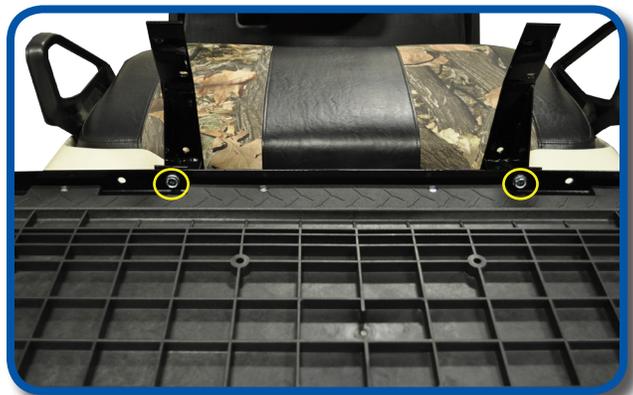

Attach rear seat frame. Using hardware from Pack 3, attach to the front lean back brackets.



Using hardware Pack 3, mount bagwell bracket to frame as shown.


**IMPORTANT:** Do not tighten hardware until Step 9 is complete.

Make sure the bagwell brackets sit on the inside of the bar as shown. Mount the seat frame to the top of the bagwell brackets.



# 7

Attach armrest to the front edge of seat frame using the hardware from Pack 4.

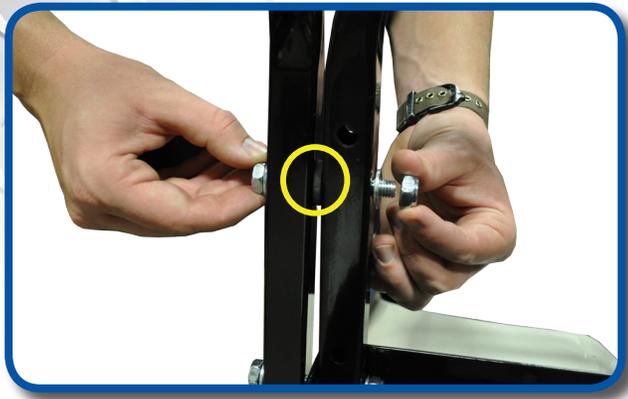

Using the hardware from Pack 5, attach the seat back support bracket and the armrest in two locations. Mount provided rubber spacer inbetween the armrest and seat back support bracket. Repeat process on the other side.

# 8

Install the rear struts using hardware from Pack 5. Attach at the bottom first. Repeat process on the other side. Tighten all hardware.




# 9



After rear struts are attached, remove brace. Insert rear struts into canopy channel. Using hardware retained from Step 1, attach rear struts to the canopy.

# 10

Using remaining hardware from Pack 5. Install the foot rest brackets. Bracket goes behind armrest and under footrest. Repeat process on other side and then tighten hardware.

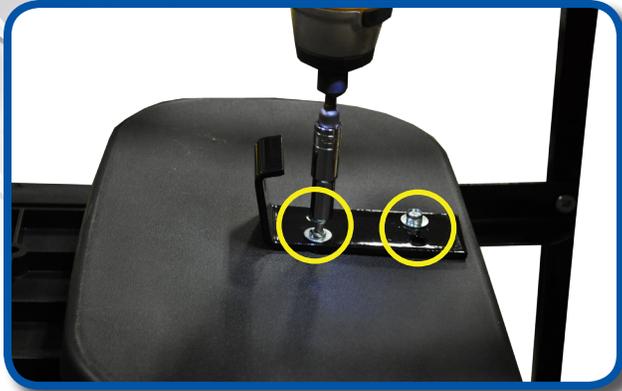

Using the hardware from Pack 6, install the lean back brackets onto the seat back cushion.

Mount the lean back cushion onto the seat back support bracket using remaining hardware from Pack 2. Once both sides have been attached, tighten hardware.



1. Place HD bracket on flip seat as shown. Align bracket holes to the flip seat mounting holes.

2. Make sure the thickest part of the seat bottom points towards the footrest. Center seat bottom from left to right on flip frame. Press cushion firmly against HD bracket and seat frame. Using provided hardware tighten the seat bottom to seat frame as shown.



# HARDWARE PACK

## PACK 1

- 4 8X25 HEX BOLT
- 8 8X20MM FLAT WASHER
- 4 8MM LOCK WASHER
- 4 RUBBER WASHER

## PACK 2

- 4 10X45MM HEX BOLT
- 8 10X20MM FLATWASHER
- 4 10MM LOCK NUT
- 4 RUBBER WASHER

## PACK 3

- 6 10X25MM HEX BOLT
- 12 10X20MM FLAT WASHER
- 6 10MM LOCK NUT
- 6 RUBBER WASHER

## PACK 4

- 2 10X40MM COUNTERSUNK
- 2 10X20MM FLAT WASHER
- 2 10MM LOCK NUT
- 2 RUBBER WASHER

## PACK 5

- 10 10X70MM HEX BOLT
- 20 10X20MM FLAT WASHER
- 10 RUBBER WASHER
- 10 10MM LOCK NUT

## PACK 6


- 4 6X25MM HEX BOLT
- 4 6MM LOCK WASHER
- 4 6X17MM FLAT WASHER

## PACK 7

- 8 8X35MM COUNTERSUNK

### 01-007/008 GENESIS150 REAR FLIP SEAT FOR E-Z-GO TXT (007-TAN / 008-WHITE)

WARRANTY PARTS  
EXPLODED VIEW DIAGRAM

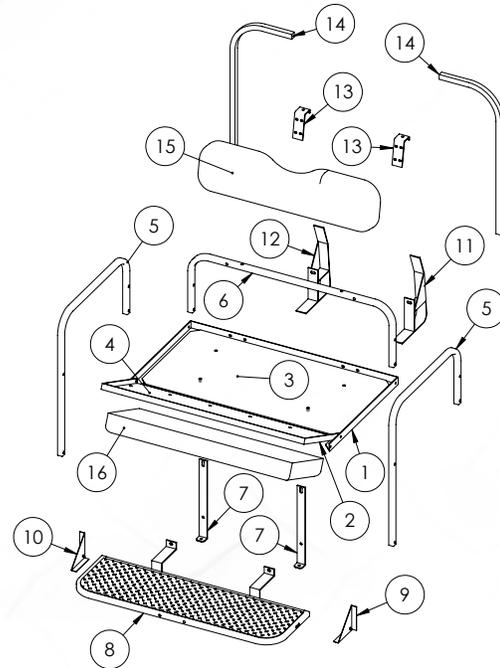

Seat cushions not included on Seat Frame Only Kits.