

Revised December 2014



*Grab bar not included

01-010/01-011 REAR FLIP SEAT WILL FIT E-Z-GO® RXV® INSTALLATION INSTRUCTIONS

INCLUDED:



Seat Frame




Lean Back Cushion



Seat Bottom Cushion



HD Bracket

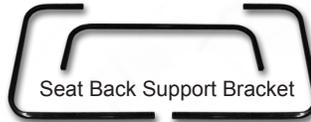

Seat Back Support Bracket

2 Armrests



2 Brackets



2 Seat
Back Brackets



2 Footrest
Brackets



Footrest



Bagwell Bracket

1



Remove factory canopy, rear struts, seat back and motor cover. Retain hardware.



Attach bracket as shown on both sides using hardware retained from Step 1.

2

3
Mount lean back brackets to main brackets as shown with hardware from Pack 1.

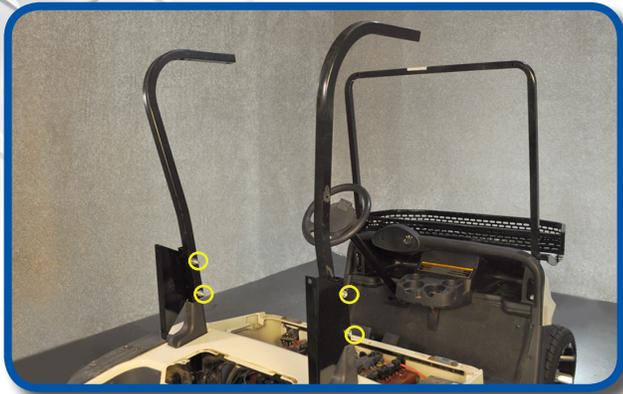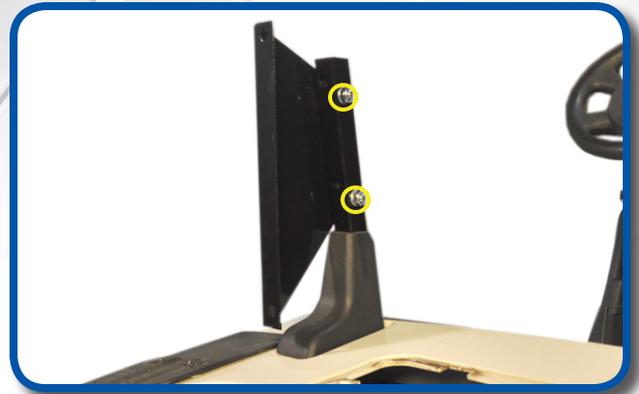

4
Attach rear struts using retained hardware from Step 1. Tighten hardware.

5
Attach motor cover using hardware retained from Step 1.



6
Remove outermost bolts in bagwell and attach bagwell bracket using same hardware. Be sure the lip of the bagwell brackets faces towards the inside of the cart as shown. Tighten hardware.

7
Attach seat frame to bagwell brackets using hardware from Pack 2.



8
Attach seat frame to brackets using remaining hardware from Pack 2. Tighten hardware.


9
IMPORTANT: Do not tighten hardware until Step 14 is complete.

Attach armrests and seat back support using hardware from Pack 3 as shown. Be sure to place spacers from hardware pack between the armrest and seat back support bracket.




10
The spacers should be placed as shown on both sides of the cart.


11
Attach footrest and footrest brackets using hardware from Pack 4.

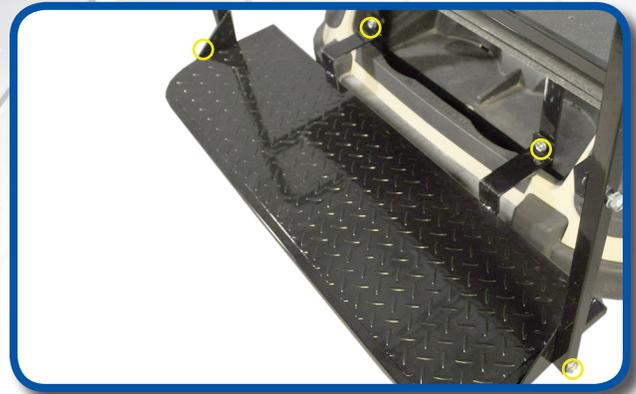

12
Attach seat back brackets to seat back using hardware from Pack 5.

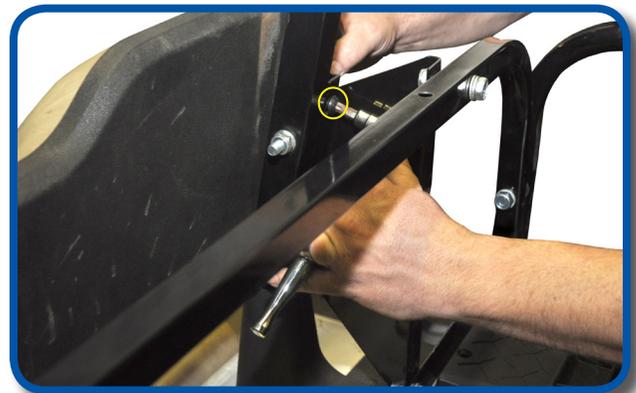

13
Attach front seat back to brackets using retained hardware from Step 1.

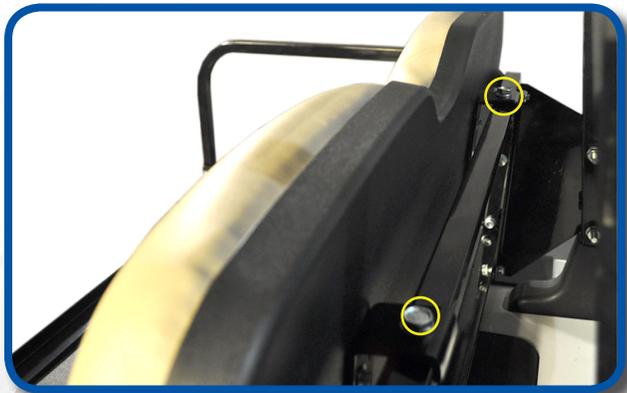


14
Attach seat back to seat back support using hardware from Pack 2. Tighten all hardware.



1. Place HD bracket on flip seat as shown. Align bracket holes to the flip seat mounting holes.

2. Make sure the thickest part of the seat bottom points towards the footrest. Center seat bottom from left to right on flip frame. Press cushion firmly against HD bracket and seat frame. Using provided hardware from Pack 6 tighten the seat bottom to seat frame as shown.

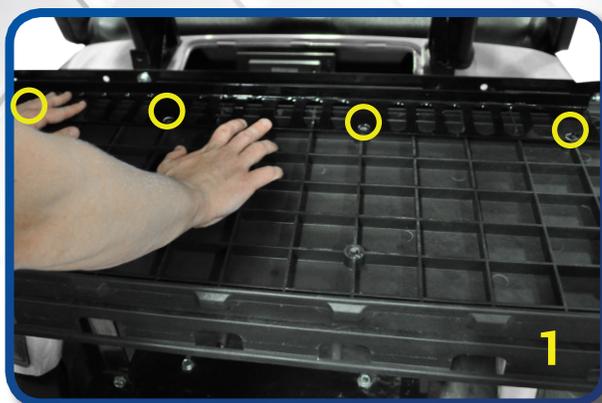

INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR INSTALLATION VIDEOS

HARDWARE PACK

PACK 1

- 4 10X45 HEX BOLT
- 8 10X20MM FLAT WASHER
- 4 10MM LOCK NUT

PACK 2

- 4 10X25MM HEX BOLT
- 12 10X20MM FLAT WASHER
- 6 10MM LOCK NUT
- 2 10X40MM HEX BOLT

PACK 3

- 2 10X40MM HEX BOLT
- 4 10X70MM HEX BOLT
- 2 10X40MM COUNTERSUNK
- 14 10X20MM FLAT WASHER
- 8 10MM LOCK NUT
- 2 RUBBER SPACER

PACK 4

- 2 10X70MM HEX BOLT
- 2 10X25MM HEX BOLT
- 8 10X20MM FLAT WASHER
- 4 10MM LOCK NUT

PACK 5

- 4 6X25MM HEX BOLT
- 4 6MM LOCK WASHER
- 4 6X17MM FLAT WASHER

PACK 6

- 8 8X35MM COUNTERSUNK