




**GENESIS 250/300 REAR FLIP SEAT
WILL FIT STAR CART CLASSIC®
INSTALLATION INSTRUCTIONS**

INCLUDED:

- Hardware Pack 1-6
- Grab Bar
- Lean Back Brackets
- Main Bracket Support
- Armrests
- Foot rest
- Main Brackets
- Bagwell Bracket
- Mainframe
- Rear Struts

**TOOLS NEEDED:
(NOT SUPPLIED)**

- Power Drill
- 17 mm wrench
- 17mm Socket/ Wrench
- 14mm Socket/ Wrench
- 13mm Socket/ Wrench
- #3 Phillips Tip
- 3/8 Drill Bit

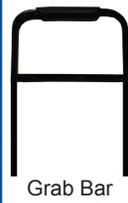

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.

1


Engage park brake and switch key to the OFF position. Remove factory canopy, and retain hardware.



Detach front lean back cushion from basket by removing four screws from lean back bracket. Retain hardware.

2


Detach basket and struts by removing four bolts located on opposite sides of the motor cover as shown. Do not retain.

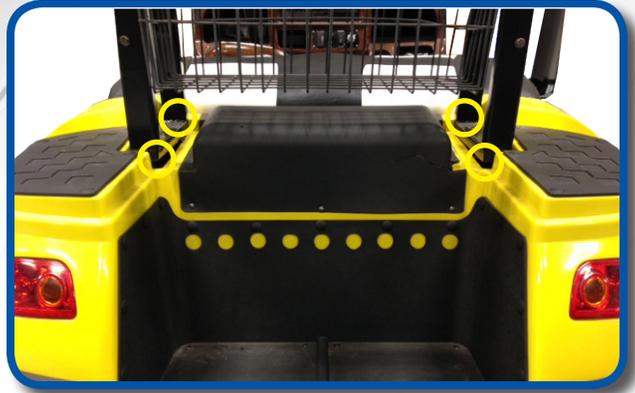

Using four 10mm x 30mm hardware from pack 1 attach the main brackets to the frame as shown. Once all four bolts are in place, then tighten.

A) Insert the two 10mm x 30mm bolts from pack #1 with washers into main bracket support as shown.

B) Attach main bracket support to seat frame at the locations shown using the two 8mm x 55mm bolts and tighten.

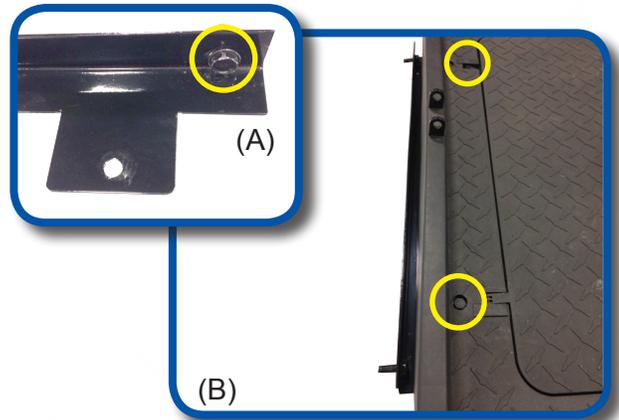

Before installing frame, attach armrests to frame using four 8mm x 30mm bolts from pack #2 and tighten.





Place bagwell bracket over bumper as shown. This will be mounted later and only used as a support to install the frame for now.


Now place main frame on to main brackets and bagwell bracket. The two 10mm bolts from STEP 5 will attach frame to main brackets using remaining hardware from Pack 1. Tighten hardware.




Attach seat frame to bagwell bracket supports using two small head 10mm x 50mm bolts from pack 2. Once both bolts are in place, tighten.



With bagwell bracket resting on bumper, use a marking pen to mark drilling locations.

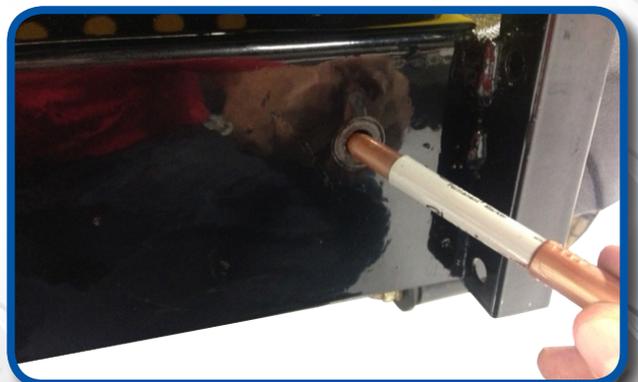


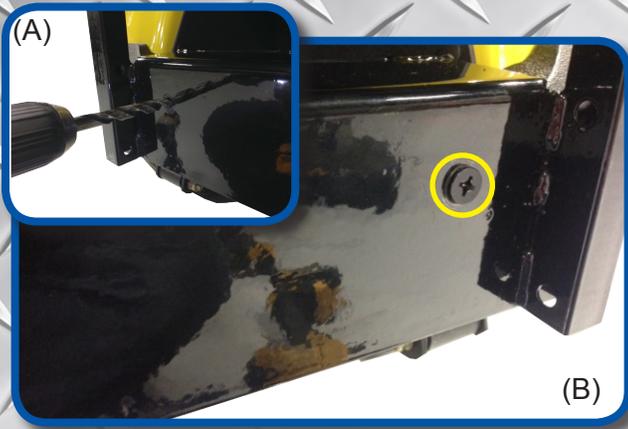

A) Using a 3/8" Drill bit, drill through bumper into bagwell.

B) Attach bagwell bracket to bumper using 10mm x 90mm #3 countersunk bolts from pack 2. Once both bolts are in place, tighten.


Attach footrest to bagwell bracket using 10mm x 75mm bolts as shown from pack #3 in the top two holes only. The bottom holes of the bagwell bracket will be secured with quick release clips in next step.

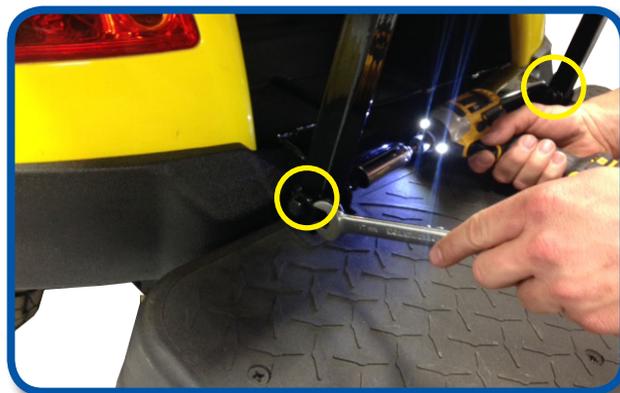


Secure footplate to lower mounting hole of bagwell bracket as shown with quick release clip from hardware Pack #3.


A) Attach grab bar to lower footrest mounting hole as shown using two 10mm x 75mm hardware from pack #3. Repeat process on other side.

B) The top holes will be secured with quick release clips.

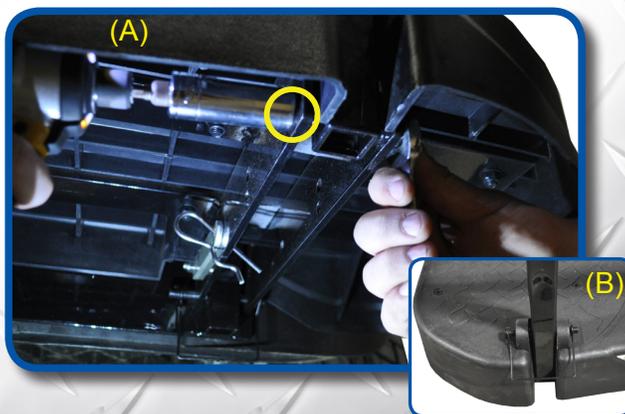


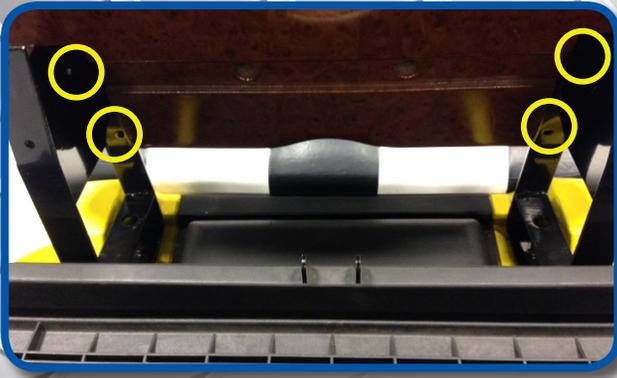

Re-attach front lean back cushion using hardware retained from STEP 2.

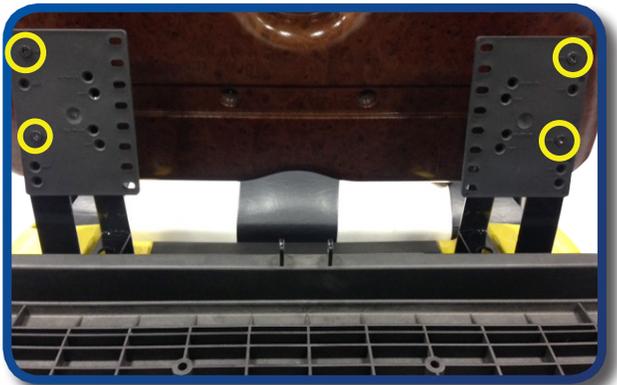


Attach lean back brackets to main brackets using the four 8mm x 25mm countersunk #3 bolts from Pack 4. Use the holes marked PRE as shown.

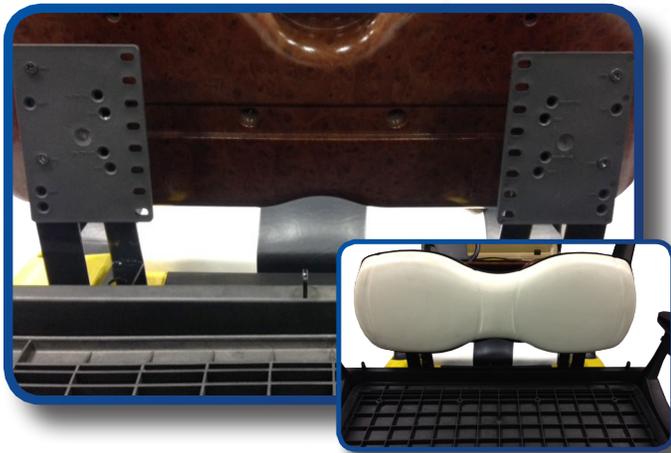

Choose desired height and attach lean back cushion to lean back bracket using the four 6mm x 25mm bolts from pack #4 and tighten once all four bolts are in place.

Attach seat bottom cushion as shown using hardware from Pack #5.

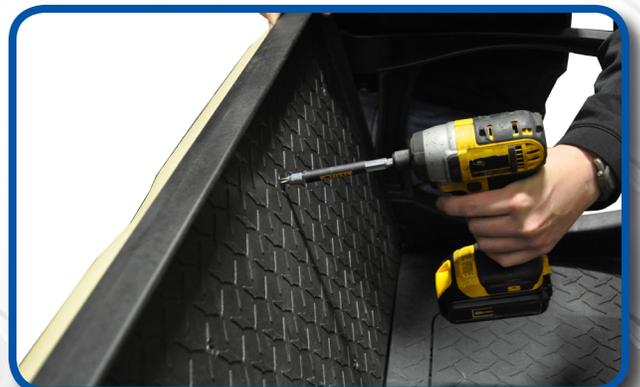

19

Attach new struts to main brackets using four 10mm x 45mm bolts from Pack #6 as shown.



20

Attach factory top to front struts and new rear struts using hardware retained from Step 1.

HARDWARE PACK

Pack #1

- 6- 10mm x 30mm Hex Head Bolts
- 2- 8mm x 55mm Hex Head bolts
- 8- 10mm x 20mm Flat Washers
- 4- 8mm x 17mm Flat Washers
- 2- 10mm Lock Nuts
- 2- 8mm Lock Nuts
- 10- Rubber Washers

Pack #2

- 2- 10mm x 50mm Hex Head Bolts (smallhead)
- 2- 10mm x 90mm countersunk #3 Phillips
- 4- 8mm x 30mm Hex Head Bolts
- 6- 10mm x 20mm Flat washers
- 4- 8mm x 17mm Flat washers
- 4- 10mm Lock Nuts
- 6- Rubber Washers

Pack #3

- 4- 10mm x 75mm Hex Head Bolts
- 8- 10mm x 20mm Flat Washers
- 4- 10mm Lock Nuts
- 4- Quick Release Pins
- 8- Rubber Washers

Pack #4

- 4- 8mm x 25mm countersunk #3 Phillips
- 4- 8mm x 17mm Flat Washers
- 4- 8mm Lock Nuts
- 4- 6mm x 25mm Hex head bolts
- 4- 6mm x 15mm Flat Washer
- 4- 6mm Lock Washer

Pack #5


- 8- 8mm x 40mm Countersunk #3 Phillips

Pack #6

- 4- 10mm x 45mm Hex Head Bolts
- 8- 10mm x 20mm Flat Washers
- 4- 10mm Lock Nuts
- 8- Rubber Washers

GENESIS 300/250 REAR DELUXE SEAT FOR STAR CART

WARRANTY PARTS EXPLODED VIEW DIAGRAM

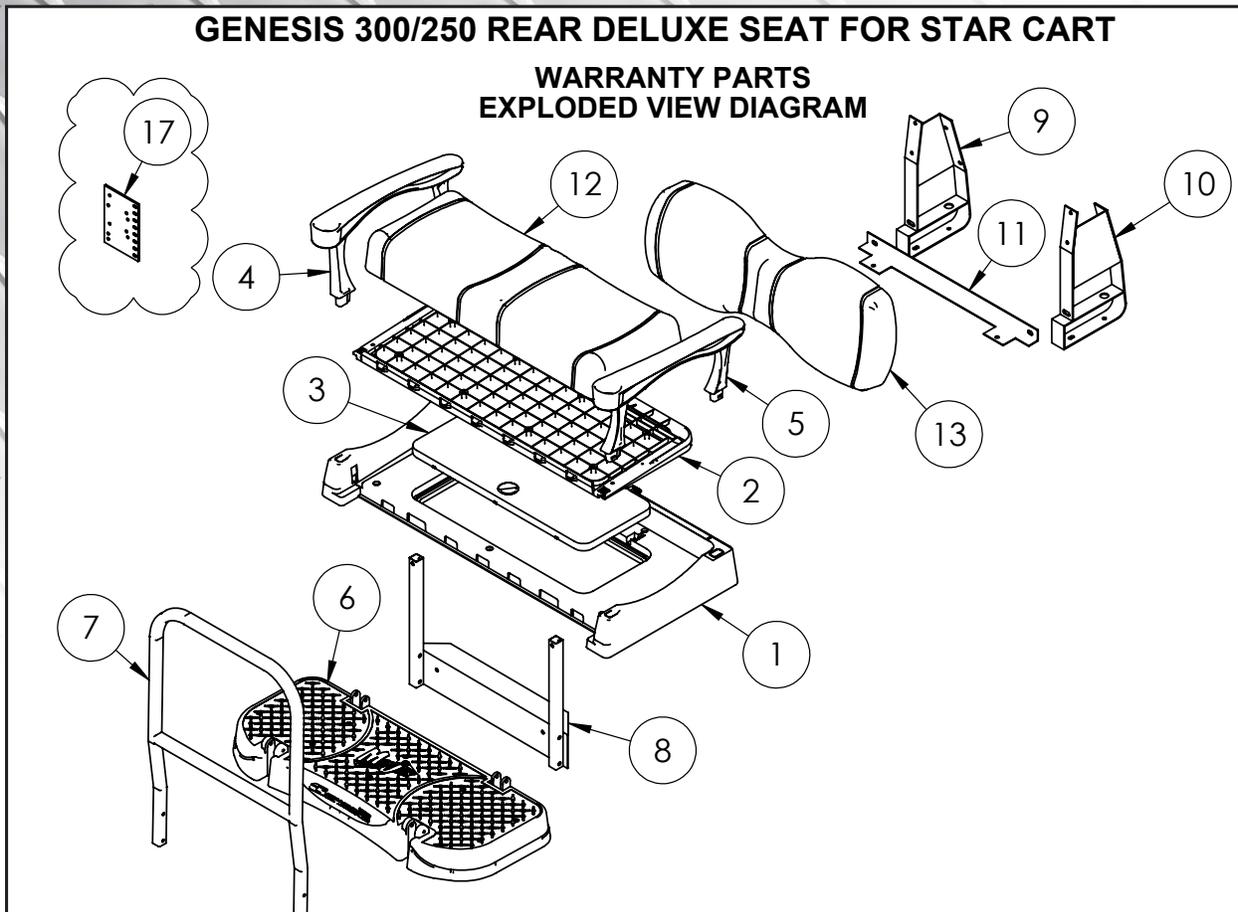

INSTALLATION COMPLETE

VISIT WWW.MYMAJAX.COM FOR INSTALLATION VIDEOS

*E-Z-GO®, E-Z-Go® TXT®, E-Z-Go® FREEDOM TXT®, E-Z-Go® CUSHMAN® and E-Z-Go® RXV® are registered trademarks of Textron Innovations, Inc. Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. Yamaha®, Yamaha® Drive®, G-14®, G-16®, G-19®, and G-22® are registered trademarks of Yamaha Golf-Car Company. Any reference to Club Car®, E-Z-Go®, or Yamaha® or their associated trademarks, word marks, and products are only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by either Textron Innovations, Inc., Ingersoll Rand, Inc., Yamaha Golf Cart Company, or any of their parent or subsidiary companies.

