



GENESIS 250/300 REAR SEAT

WILL FIT CLUB CAR® DS®


INSTALLATION INSTRUCTIONS

INCLUDED:

- Hardware Packs 1-8
- Grab Bar
- Lean Back Brackets
- Back Bracket
- Armrest
- Footrest
- Main Frame

TOOLS NEEDED:

- Drill
- 17mm Socket
- 17mm Wrench
- 14mm Socket
- 10mm Socket
- #3 Phillips Bit
- 13mm wrench

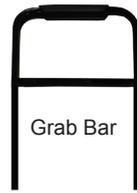

Grab Bar

Lean Back Brackets



Main Bracket



Bagwell Bracket



Armrests

Struts



Footrest




Main Frame


Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1

Remove all rear accessories (if any), struts, bumper, motor cover, front seat and bracket. Retain canopy hardware and all front seat mounting hardware. Use brace to support canopy.

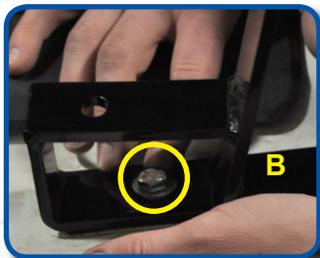

B

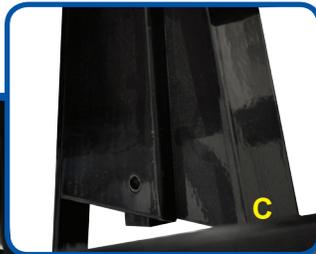

C



A

A) Attach main brackets to cart, above battery compartment with retained hardware.

B) Using 8mm hardware from Pack 1 mount middle to cart as shown.

C) Strut should be aligned to the inside of main bracket as shown.


2



Attach bagwell bracket to frame as shown using hardware from pack 2 and tighten.

3

Attach main frame to main seat bracket using hardware from pack 2 and tighten.

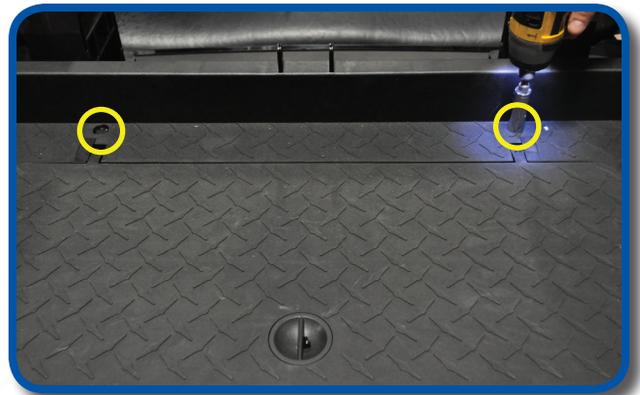

4



Attach bagwell bracket to polyboard seat frame as shown using hardware from pack 2. Repeat process on other side.



5

Attach arm rest to polyboard seat frame as shown using hardware from pack 3.




6

Using appropriate hole for your cart attach lean back brackets to main seat bracket using hardware from pack 4.

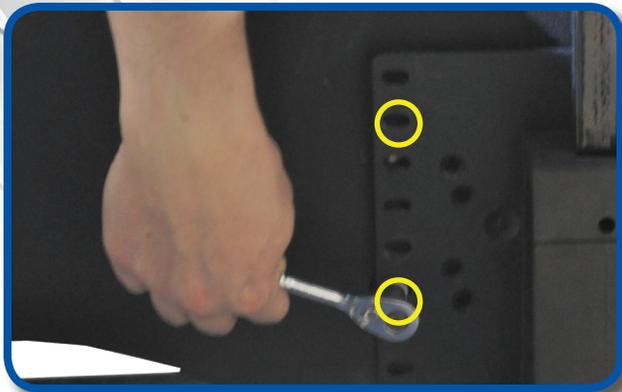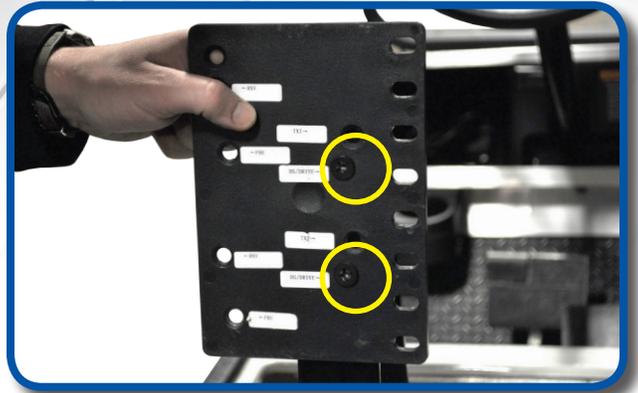


Choose desired height, and attach lean back cushion to bracket as shown using hardware from pack 5.

Attach footrest to bagwell bracket as shown using 10mm hardware from Pack 6. Repeat process on the other side.

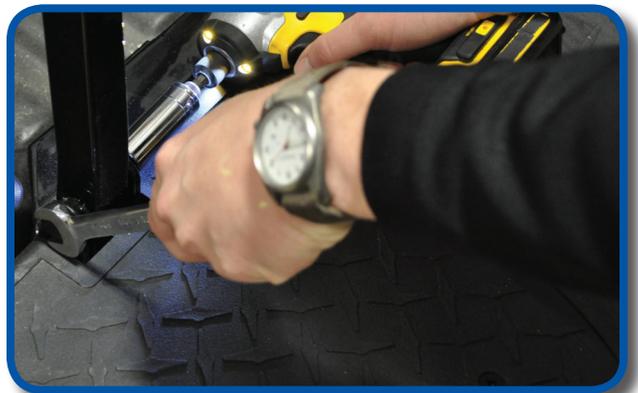

Attach grab bar to footrest as shown using 10mm hardware from pack 6.

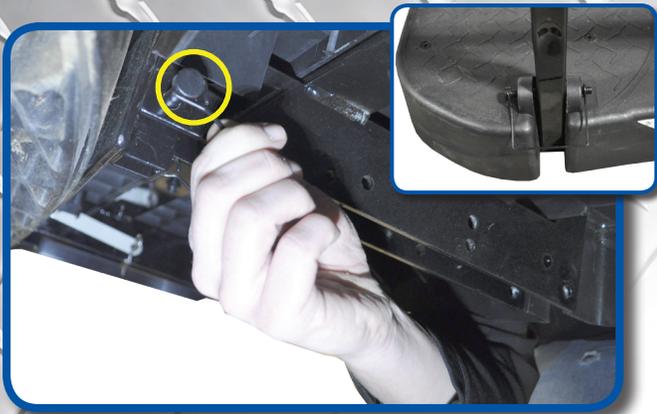


Using quick release clips from hardware pack 6 Secure footplate to bagwell bracket and grab bar as shown.

11

12

Attach seat bottom cushion as shown using hardware from pack 7.

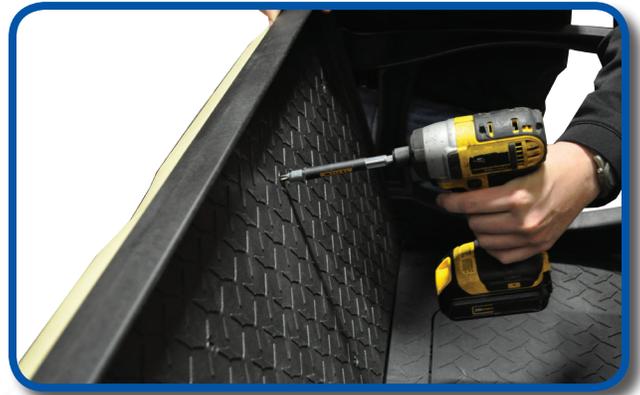


Re-attach roof using hardware retained from Step 1 as shown. Attach struts to main bracket using hardware from pack 8.

13

14

Footplate can be folded up by removing the four quick release clips and folding forward. To lock footplate in up right position use brackets as shown.

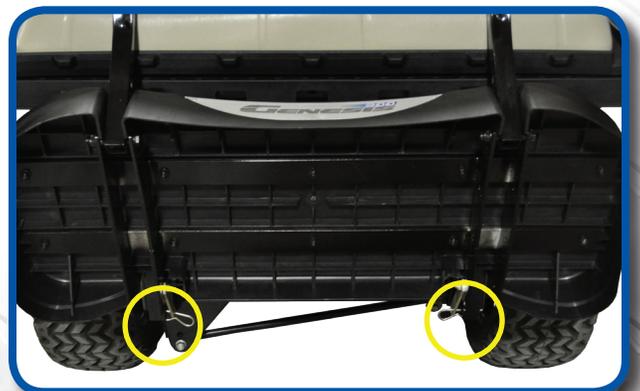



INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS.

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.

HARDWARE PACKS

Pack 1

- 2 – 8x30mm hex bolt
- 4 – 8x17mm flat washer
- 2 – 8mm lock nut

Pack 2

- 2 – 8x60mm hex bolt
- 4 – 8x15mm flat washer
- 2 – 8mm lock nut
- 2 – 10x30mm hex bolt
- 8 – 10x20mm flat washer
- 4 – 10mm lock nut
- 2 – 10x50mm hex bolts
- 12 – Rubber washers

Pack 3

- 4 – 8x30mm hex bolt
- 4 – 8x15mm flat washer

Pack 4

- 4 – 8x30mm countersunk #3 Phillips
- 4 – 8x15mm flat washer
- 4 – 8mm locknut

Pack 5

- 4 – 6x25mm hex bolt
- 4 – 6x15mm flat washer
- 4 – 6mm lock washer

Pack 6

- 4 – 10x75mm hex bolt
- 8 – 10x20mm flat washer
- 4 – 10mm Locknut
- 4 – Quick release pins (easy remove hardware for folding in the foot plate)
- 8 – Rubber washers

Pack 7

- 8 – 8x40mm countersunk

Pack 8

- 4 – 8x45mm Hex bolt
- 8 – 8x17mm flat washer
- 4 – 8mm locknut

GENESIS 300/250 REAR DELUXE SEAT FOR CLUB CARS
WARRANTY PARTS
EXPLODED VIEW DIAGRAM

