




09-005

WINDSHIELD

WILL FIT E-Z-GO® FREEDOM TXT®

INSTALLATION INSTRUCTIONS

INCLUDED:

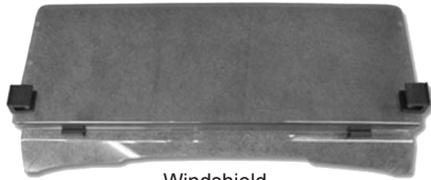

Windshield



2 Strut Brackets



2 Grommets
2 Bolts

Madjax® recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product. The Madjax® Limited Warranty only covers defects in materials and workmanship, and does not cover damage due to improper installation. If you are having difficulty installing this product, contact your Authorized Madjax® Dealer.

1

Attach strut bracket to windshield as shown. Repeat the process on the other side.




Using rubber grommet provided, insert hardware. Repeat this process on the other side.

2



3

Firmly push windshield bracket to the front struts on both sides.

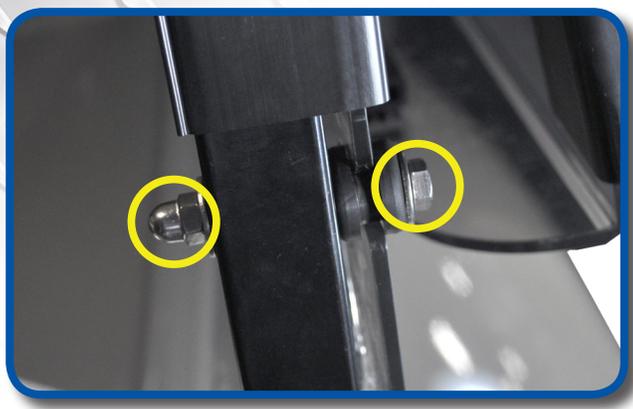

4

Using provided hardware, mount the windshield to the front struts.

5

Tighten hardware on both sides.



INSTALLATION COMPLETE

E-Z-GO®, E-Z-Go® TXT®, and E-Z-Go® RXV® are registered trademarks of Textron Innovations, Inc. ("Textron"). Reference to E-Z-Go®, TXT®, or RXV® or any of Textron's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Textron or any of its subsidiary companies.